

FOR MODELS: #4831, 4828, 4890, 4892, 4845, 4840, 4855, 4868, 4805, 9105, 4862, 4863, 4803, 4804, 4801, 4800, 4930, 4920, 4875, 4878, 4865, 4910, 4915, 4837, 5815, 5820, 5821, 5810, 5850, 5851, 5840, 5830, 5805.

IMPORTANT SAFETY INSTRUCTIONS

- * Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- * This seasonal use product is not intended for permanent installation or use.
- * Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat”.
- * Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- * Do not let lamps rest on the supply cord or on any wire.
- * Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- * **This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.**
- * Do not use this product for other than its intended use.
- * Do not hang ornaments or other objects from cord, wire, or light string.”
- * Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- * Do not cover the product with cloth, paper or any material not provided with the product when in use.
- * This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- * This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the cord should be discarded
- * Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

USE AND CARE INSTRUCTIONS

- * Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- * When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- * When not in use, store neatly in a cool, dry location protected from sunlight.

USER SERVICING INSTRUCTIONS

Replacement of fuse


- 1) Gasp plug and remove from the receptacle or other device. Do not unplug by pulling on cord.
- 2) Slide open fuse access cover on top of attachment plug towards blades.
- 3) Turn fuseholder over to remove fuse.
- 4) Risk of fire. Replace fuse only with 5 amp, 120Volt fuse (provided with product).
- 5) Slide closed the fuse access cover on top of attachment plug.

Risk of fire


- 1) Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

ASSEMBLY INSTRUCTIONS:

1. Slip cord thru slot in adapter and slide over socket so the front of edge of socket is between front and rear tabs on adapter.

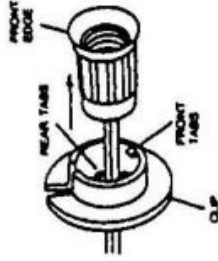

2. Screw bulb into socket and push the unit into hole in figure until it locks.

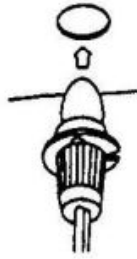


TO REMOVE ADAPTER AND REPLACE BULB:

1. To replace bulb, remove adapter by gently prying out at split with a dull pointed instrument as shown. Replace by pressing down firmly to engage snaps.



2. Push down gently on the top of the light socket until the two center snaps on the inside ring of the adapter engage with the top of the light socket. Screw in bulb and replace adaptor.

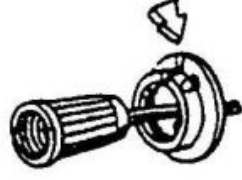

CAUTION: Maximum lamp size 7 ½ watts type C